

## Addendum for Vertical Blinds Panel Track Shades and for Cellular & Pleated Smartlift Shades Installation Guides

GUIDEs 468322, 493361 and 477828

The following instructions replace the step of each guide,  
“Mounting the Tie-Down Safety Device” or “Securing the cord loop”

### Improved Safety Tie-Down Tension Mechanism

Our new safety tie-down device has been created to comply with new and improved child safety laws. **This mechanism must be attached to the surrounding wall or frame for the blinds to operate correctly.**

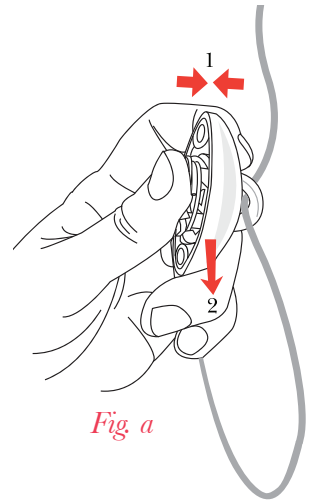


Fig a


1. Compress the tension device (*fig a-1*) and slide it all the way down the chain/cord (*fig a-2*).

2. Position the device on the wall or molding, pulling down slightly to ensure proper tension, so that the cord is taut on both sides (*fig b*).

3. Insert a screw into each screw hole, then use a screwdriver and the screws provided to install the tension device (*fig c*).

**Note:** Use appropriate wall anchors if necessary.

4. Final Check: Ensure that the chain / cord can move freely through the tie-down device.

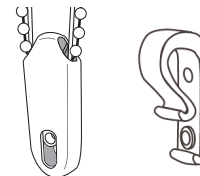

The tension mechanism pictured above replaces the following devices:

For more safety information: 1-866-662-0666  
[www.healthcanada.gc.ca/blindcords](http://www.healthcanada.gc.ca/blindcords)