

Addendum for Vertical Blinds Panel Track Shades and for Cellular & Pleated Smartlift Shades Installation Guides

GUIDE 468330, 493379 and 477836

The following instructions replace the step of each guide:
“Mounting the Tie-Down Safety Device” or “Securing the Cord Loop”

Improved Safety Tie-Down Tension Mechanism

Our new safety tie-down device has been created to comply with new and improved child safety laws. **This mechanism must be attached to the surrounding wall or frame for the blinds to operate correctly.**

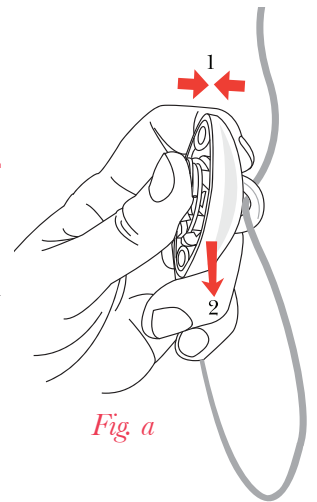


Fig a

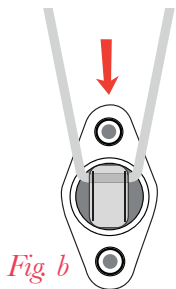


Fig b

1. Compress the tension device (*fig a-1*) and slide it all the way down the chain / cord (*fig a-2*).

2. Position the device on the wall or molding, pulling down slightly to ensure proper tension, so that the cord is taut on both sides (*fig b*).

3. Insert a screw into each screw hole, then use a screwdriver and the screws provided to install the tension device (*fig c*).

Note: Use appropriate wall anchors if necessary.


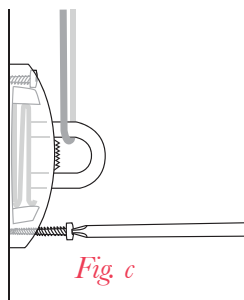


Fig c

4. Final Check: Ensure that the chain / cord can move freely through the tie-down device.

The tension mechanism pictured above replaces the following devices:

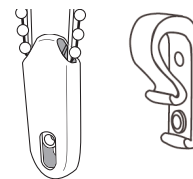

For more safety information: www.cpsc.gov/en